




 







Heimdallr KS-001 User Guide

Product accessories


No.	Part Name	Pc	Illustration
1	Head lock unit A	1	
2	Head lock unit B	1	
3	Tail lock unit C	1	
4	Key	3	
5	Key number plate	1	
6	Screw set		
	a	2	 (φ4mm)
	b	1	 (φ5mm)
	c	1	
7	Rubber gasket	4	
8	User Guide	1	

1. Install front locks

Before using Heimdallr, please install lock units A, B and C. Positions for the locks are recommended as below:

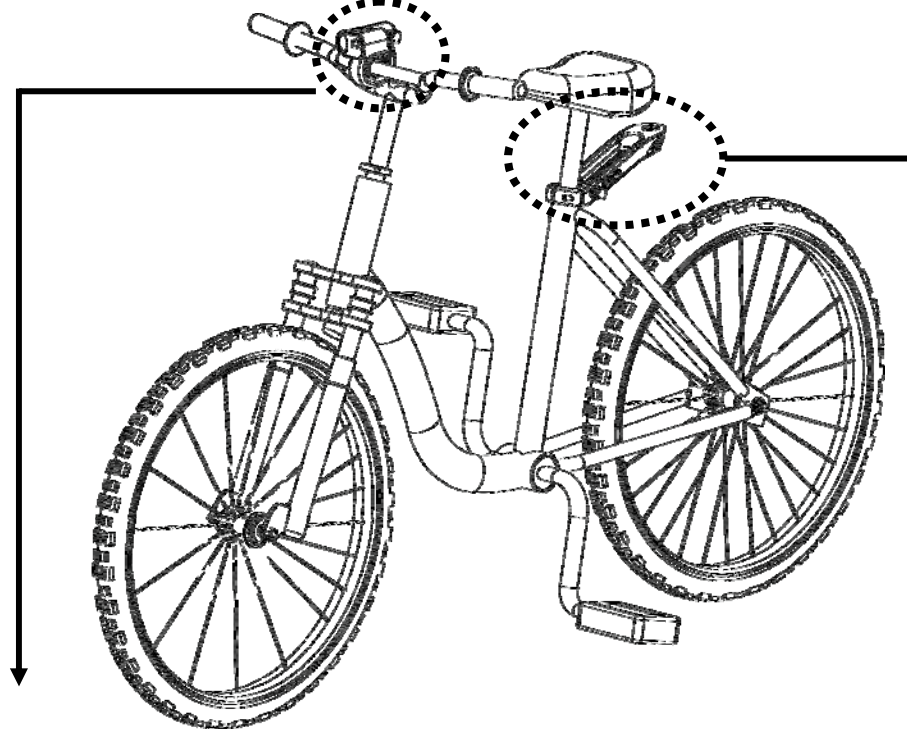


Head lock units A and B

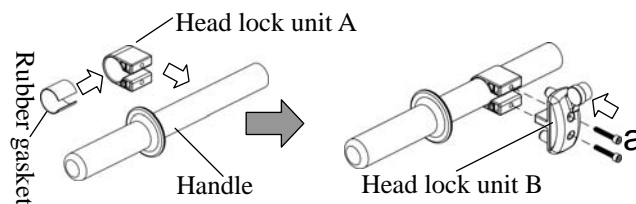

1. In consideration of the size of handlebar tube, put in the rubber gasket in head lock unit A, snap head lock unit A onto the handle, insert two screws a through the head lock unit B and tighten.

Tail lock unit C


Rubber gasket

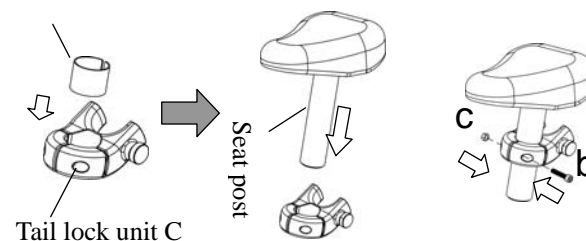


2. In consideration of the size of handlebar tube, put in the rubber gasket in tail lock unit C, snap tail lock unit onto seat post, and tighten with screw b and nut c.

2. Install battery

■ Head light lock

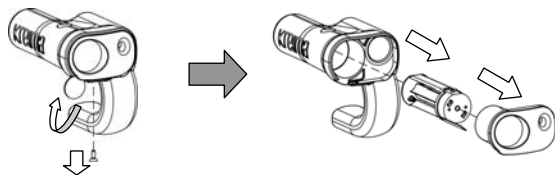


1. Remove anti-loose screw, use a coin to pry open the head light hood and remove battery compartment.

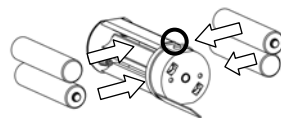


2. Insert 4 Size AAA batteries in battery unit.

※The circle sign indicates the protrusion of battery unit.

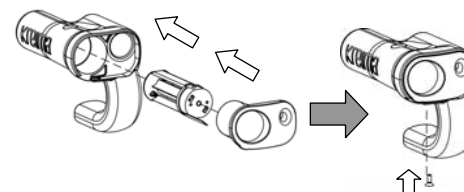


3. Put battery unit, with protrusion pointing up, back into lock unit, replace head light hood and tighten anti-loose screw.


■ Tail light lock

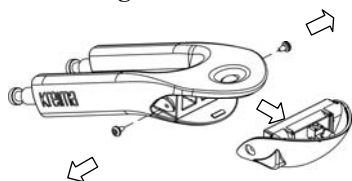

1. Remove anti-loose screws on two sides, and remove tail light hood.

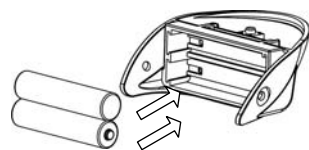


2. Insert 2 Size AAA batteries.

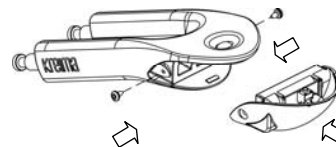


3. Replace tail light hood and tighten anti-loose screws on two sides.

3. Locking and unlocking description


■ To lock

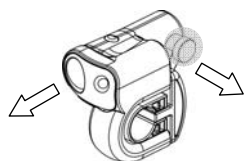

1. Reverse the bolt and remove head light lock.

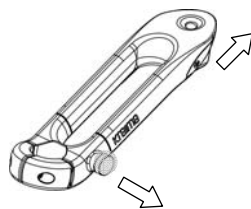


2. Reverse the bolt and remove tail light lock.

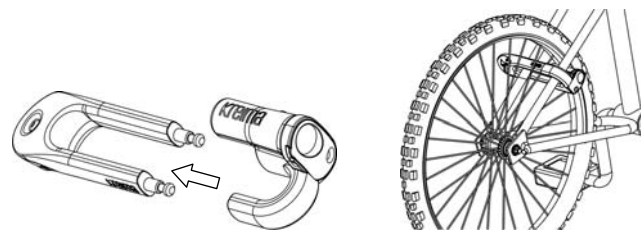


3. Directly snap on head light and tail light locks. You may lock them between the fork and wheel.


■ To unlock

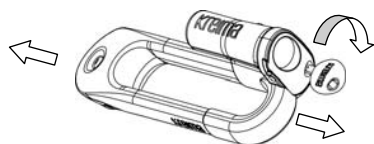

1. Insert key and turn to stop position to separate head light and tail light locks.

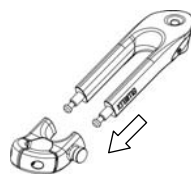

2. Directly insert tail light lock into tail lock unit.

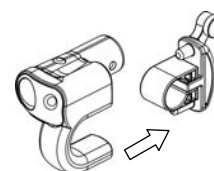

3. Remove key and directly mount head light lock on head lock unit.

■ Cautions in use

1. Please keep your key number plate and key in separate places. In case you lose your key, you can give us the key number plate and we will reproduce a new key for you.
2. Lock element needs monthly maintenance by dripping some lubricating oil, and wipe off surrounding dust and dirt, to enable smooth operation and extend the service life of your locks.
3. If lights will be laid unused, please remember to turn off power. If use is not needed for a longer period of time, please take out the battery to extend their service life. Before use, please check for battery level.
4. This product is applicable to seat post size 2.54~3.4cm, and handlebar tube size 2~2.54cm.

KREIMA

www.kreima.com